

User Manual


homexpert[™]




LS15AUK Lockshield Valve

50051972-001 Rev. A

Lockshield adjustments

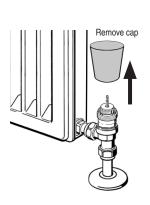


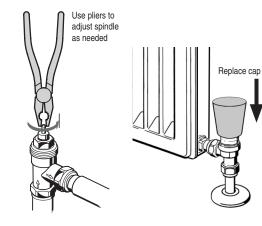

Remove the plastic cap to adjust the lockshield. Turn valve spindle clockwise to close, counter-clockwise to open.

To balance several radiators so they heat at the same rate, open the valve more as the distance from the boiler increases. To close the valve completely, turn the spindle clockwise until it stops.

Installation options

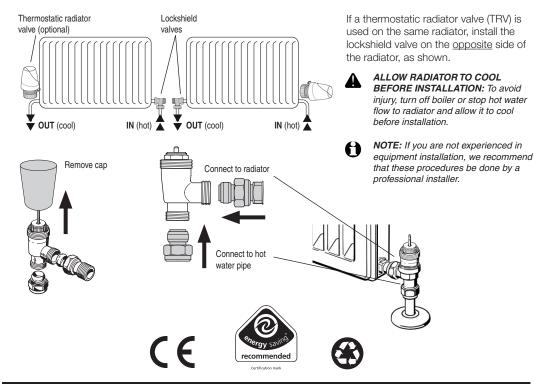

Limited warranty

Honeywell warrants this product for 1 year from date of purchase. We undertake to replace or repair at our discretion, products should they become defective within 1 year solely as a result of faulty materials and or workmanship.

Understandably if the product has not been installed or maintained in accordance with Honeywell's instructions, has not been used appropriately or if any attempt has been made to rectify, dismantle or alter the product in any way the warranty will be invalidated.

This product warranty states Honeywell's entire liability. It does not extend to cover consequential loss or

damage or installation costs arising from a defective product.

If the product is defective, please return it together with a proof of purchase or receipt to the place of purchase.

This does not affect your statutory rights.

If you require further information about this product, call the homexpert™ by Honeywell technical helpline on 0845 604 2893.

homexpert*

by Honeywell

For a full list of terms and conditions please visit www.homexpertbyhonyewell.com.

Honeywell

The Arnold Centre

Paycocke Road

Basildon, Essex

SS14 3EA

Technical Help Desk: 0845 604 2893

www.homexpertbyhoneywell.com

50051972-001 Rev. A

© 2010 Honeywell International Inc

 $homexpert^{\tiny{\text{TM}}} \ by \ Honeywell \ is \ a \ trademark \ of \ Honeywell \ International \ Inc. \ All \ rights \ reserved.$



